

---

---

PENTAX OptioWP Firmware Updating to Version 1.01

---

---

\* Firmware is the software that runs inside digital cameras.

Updatable models

OptioWP digital cameras running Firmware Ver. 1.00

How to check version

Turn the power on while pressing the MENU button.

The Firmware version is displayed for about 5 seconds on the LCD Monitor

\* Perform the above operation without inserting the SD card containing Firmware in the camera.

\*\*\*\*\* [Caution] \*\*\*\*\*

Please use the provided rechargeable lithium-ion battery when updating Firmware.

\* Make sure that rechargeable lithium-ion battery should be fully charged.

If the camera turns off during updating due to lack of battery power, the camera will become inoperable. If this happens, a charge will be made for repairs even if within the warranty period.

\*\*\*\*\*

### Updating Procedure

1. Prepare a formatted SD card for the update software (with at least 8MB of available memory space).

The downloaded file is self-extracting.

The following files are extracted.

fwdc134p.bin : Firmware

Copy the above Firmware file [fwdc134p.bin] to the root directory in the SD card.

If your computer does not have a card slot, you can copy the firmware update file by inserting the SD card into your camera and then connecting the camera directly to your computer.

2. If the camera power is on, turn it off.

3. Insert the update SD card (prepared in step 1) into the camera.

4. Put rechargeable lithium-ion battery into the camera.

\* Make sure that it is fully charged

5. Turn the camera power on while pressing the MENU button.

6. PROGRAM UPDATE  
YES

NO  
NEW VERSION IS  
VER 1.01  
will be displayed in the monitor

7. Press the four-way controller to select "YES" and press the "OK" button.
8. "NOW LOADING" appears in the LCD monitor
  - \* It will take approximately 40 seconds to complete update.
9. When update is completed, the "COMPLETE" will be displayed at the left bottom of the LCD monitor, and then turn the camera off.
10. Remove the update SD card from the camera.
11. To check the Firmware version in your camera, turn the camera on while pressing the MENU button.  
Check that the version displayed in the LCD monitor is 1.01.  
The camera automatically starts up after about 5 seconds.

(Caution)

When updating is finished, the update SD card still contains the Firmware file.

If you want to use this card to take pictures, delete the Firmware file first.

PENTAX Corporation